USER'S MANUAL

625UAB

BLUETOOTH®-ENABLED | MP3-COMPATIBLE DIGITAL MEDIA AM/FM RECEIVER

BOSS® AUDIO SYSTEMS

0813

iPod® / iPhone® are trademarks of Apple, Inc. registered in the U.S. and other countries.
BOSS Audio Systems is not affiliated with Apple, Inc.

USER'S MANUAL

625UAB

BLUETOOTH®-ENABLED

MP3-COMPATIBLE DIGITAL MEDIA AM/FM RECEIVER

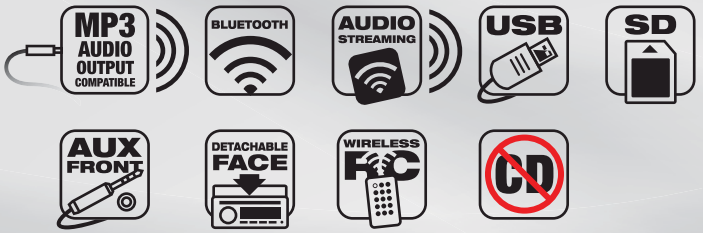

BOSS® AUDIO SYSTEMS

DESCRIPTION OF CONTROLS ON FRONT CONTROL PANEL

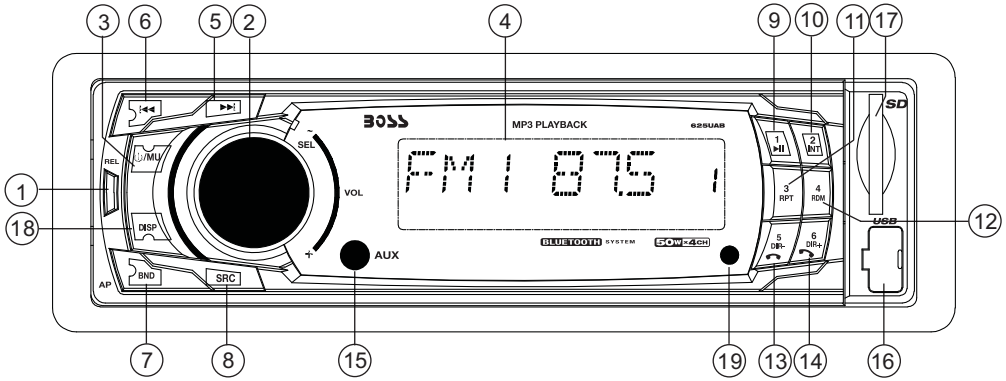

Front Control Panel

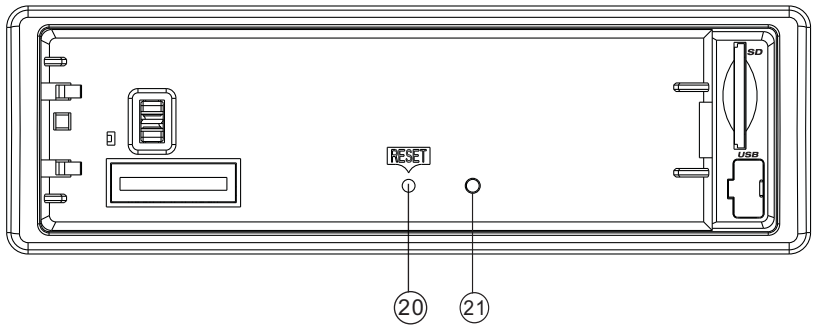

Front Cabinet after removing Front Control Panel

1. RELEASE button
2. SEL & VOL knob
3. POWER & MUTE button
4. LCD
5&6. >>| And |<< buttons
7. BAND/AP button
8. SRC button
9. 1/TOP/>|| button
10. 2/INT button
11. 3/RPT button
12. 4/RDM button
13. 5 DIR-/HANG UP button
14. 6 DIR+/TEL button
15. AUX IN jack
16. USB socket
17. Card slot
18. DISP
19. IR Remote Sensor
20. RESET
21. FLASHING LED

SPECIFICATION

GENERAL		
Supply Voltage	DC 12V. Negative Ground	
Current Consumption	Max.10A	
Power Output	4 x 50 W	
Number of channels	2 STEREO channels.	
Unit Dimensions	(L X W X H): 7 X 3.85 X 1.97	
	178 X 98 X 50 (mm)	
FM SECTION		
Frequency range	87.5Mhz - 108Mhz	(Europe)
	87.5 Mhz - 107.9Mhz	(U.S.A.)
Effective sensitivity	3uV.	
I.F Frequency	10.7MHz.	
AM SECTION		
Frequency range	522Khz - 1620Khz	(Europe)
	530khz - 1710Khz	(U.S.A.)
Effective sensitivity	40dB.	
I.F Frequency	450KHz	
Preamp Output	1 V Output	
SD or USB PLAYBACK		
System	MP3 audio system.	
Frequency characteristics	20Hz -100Hz <=5dB	
	10KHz-20KHz <=5dB.	
Signal to noise (SD & USB)	50dB [1KHz] .	

WIRES CONNECTION

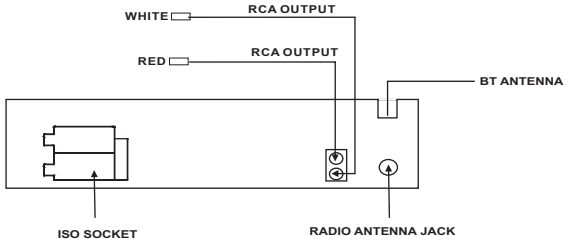

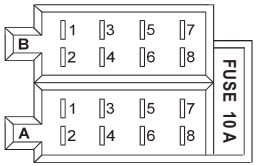

ISO SOCKET SKETCH

CONNECTOR A

1.
2.
3.
4.YELLOW MEMORY +12V
5. BLUE AUTO ANTENNA B+
6.
7. RED POWER B+
8. BLACK GROUND

CONNECTOR B

1. VIOLET R.R SP(+)
2. VIOLET BLACK R.R SP(-)
3. GREY F.R SP(+)
4. GREY BLACK F.R SP(-)
5. WHITE F.L SP(+)
6. WHITE BLACK F.L SP(-)
7. GREEN R.L SP(+)
8. GREEN BLACK R.L SP(-)

DESCRIPTION OF BUTTONS ON REMOTE CONTROL

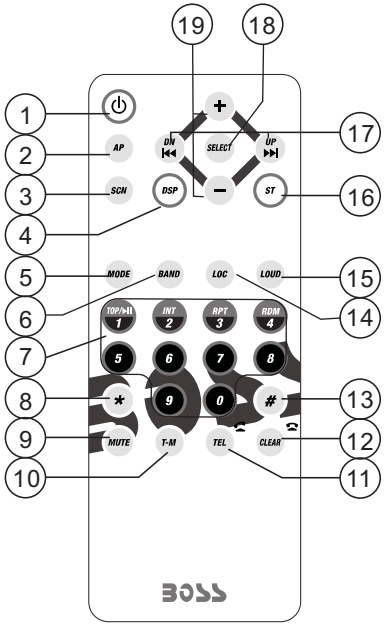

1. POWER button
2. A.P button
3. SCN(SCAN) button
4. DSP button
5. MODE button
6. BND(BAND) button
7. Number(0~9) buttons
8. * button
9. MUTE button
10. T-M button
11. TEL button
12. CLEAR button
13. # button
14. LOC button
15. LOUD button
16. ST button
17. >>| and |<< buttons
18. SEL button
19. + and - buttons

REMOTE CONTROL

Load/unloading battery of remote control

1. Please remove insulating sheet out of remote control before use. Pull out insulating sheet in the direction as per fig. 1.
2. When changing battery for remote control, first pull the movable block hold in the direction as indicated in Fig. 2 arrow A. Then pull the battery holder out from the remote control in the direction as indicated in Fig.2 arrow B.
3. Replace the old battery by a new battery with (+) polarity side upward. Then return the battery holder to the remote control by pressing the battery holder. Please see Fig.3.

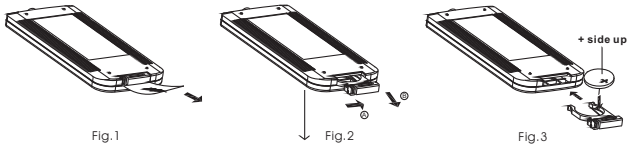

Fig.1 Fig.2 Fig.3

Note about the battery of remote control:

1. Improper use of battery may cause overheating or explosion. Which may result in jury or fire .
2. Battery leakage may cause damage to the remote control(Battery Life: 6 months with normal use in normal room temperature).
3. Do not short the battery.
4. Do not throw the battery into the fire.
5. To avoid the risk of accident, keep the battery out of reach of children.

Common operation:

1. To turn the unit on/off .
When the unit is power Off, it may be switched On by pressing any button except RELEASE button.
When the unit is switched On, press and hold POWER button for more than 0.5 seconds, to switch the power off.

2. To select function mode
Press SRC button to change function mode as follows:
-->TUNER -->USB(after inserting USB stick)-->CARD(after inserting SD card)-->BT--> AUX-->
When there is no media (USB/CARD), that mode will be skipped.

3. To adjust the volume level
Rotate VOL knob or press + or - button on remote control to adjust volume level during playback.

4. To mute or resume sound
Press MUTE or MU button to eliminate or resume sound immediately during playback.
To resume the sound immediately, you can rotate VOL knob.

5. To set sound mode and menu
1).To set sound mode:
Press SEL button shortly and repeatedly to select mode of VOL(volume), BASS (without preset DSP), TRE(treble)(without preset DSP), BAL(balance) and FAD (fader) in the sequence and circulation. In each mode, the waiting time is about 5 seconds, and when the waiting time is over, it will return to the last display mode. After selecting a sound mode, use volume control to set level of the selected sound mode.

2).To set menu:
Press SEL button and hold for more than 2 seconds to turn on BEEP ON/BEEP OFF, then press SEL button shortly and repeatedly to select USER SET (FLAT/CLASSIC/ ROCK/POP), VOL LAST/VOL DEFA(AVOL) , AMERICA3/EUROPE(in RADIO mode), STEREO/MONO(in RADIO mode), LOUD OFF/LOUD ON, DX/LOCAL(in RADIO mode) mode. After selecting a desired item, use volume control to set.

3) BEEP ON/BEEP OFF
BEEP ON mode: The beep is generated when any key is pressed.
BEEP OFF mode: The beep sound is disabled.

4) VOL LAST/VOL DEFA
VOL LAST: The volume level when switching off will be restored with power On.
VOL DEFA: The volume level of the main unit after power on is a constant value.
when selecting VOL DEFA item, press SEL button to display AVOL , then
you can pre-set the constant volume level after power on with VOL control.

6. DISPLAY AND ADJUST THE TIME
Press the DISP button on the unit or DSP button on the remote control to display the time.
Then press and hold the DISP button for more than 1 seconds until the real time flashes on the display. Then you can adjust HOUR or MINUTE by rotating the VOL KNOB.

INSTALLATION METHOD

This is an anti-theft installation method. The main unit wears a METAL MOUNTING SLEEVE. Please connect the wiring, eg, the Power Supply, the Speakers and the Antenna according to the requirements of this Instruction Manual, then install the metal mounting sleeve into the car as per the diagram illustrated below.

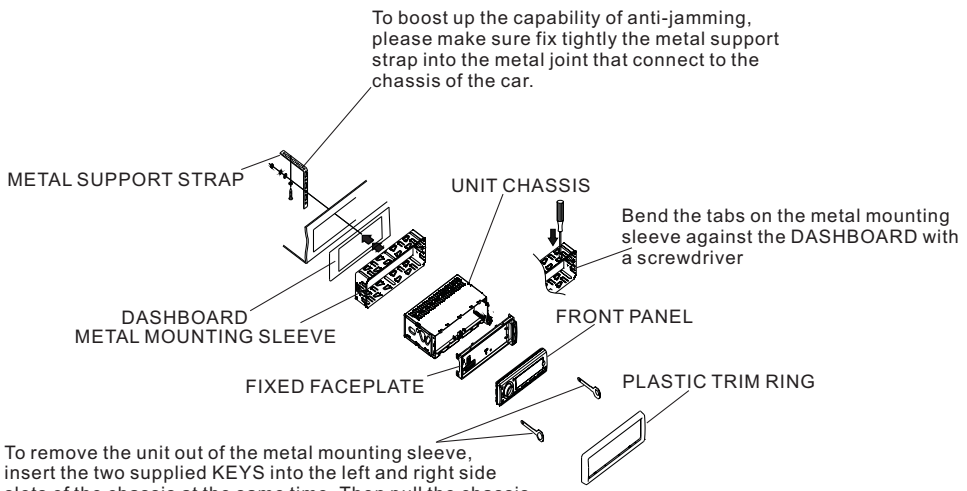
To boost up the capability of anti-jamming, please make sure fix tightly the metal support strap into the metal joint that connect to the chassis of the car.
METAL SUPPORT STRAP
UNIT CHASSIS
Bend the tabs on the metal mounting sleeve against the DASHBOARD with a screwdriver
DASHBOARD
METAL MOUNTING SLEEVE
FRONT PANEL
FIXED FACEPLATE
PLASTIC TRIM RING
To remove the unit out of the metal mounting sleeve, insert the two supplied KEYS into the left and right side slots of the chassis at the same time. Then pull the chassis out of the metal mounting sleeve as shown in the right illustration.

4) Press and hold CLEAR button to cancel all numbers entered if necessary.

5) Briefly press TEL to start dialling. The talking time will appear on LCD if dialling is successful and it is received.

C) Redial
Press TEL button on remote control twice or press 6DIR+ button on main unit, it will show the last dialled phone number on LCD and dial the number directly.

4. Accept/ Reject/ End Call

A) During ringing, press TEL button to accept the call.

B) During ringing, press CLEAR button to reject the call.

C) During talking, press CLEAR button to end the call.

Note:
During ringing, PHONE appears and then the phone number.
During talking, talking time appears.

5. Talking volume level setting
While talking, use volume control to adjust volume level, but this volume level can not be saved.

6. Dialling or receiving calls while the unit is in sleep mode
When the car radio is in standby mode (Acc on and Power off), when dialling or receiving a call, the car radio will power on automatically. After the call is completed, the radio will revert to standby mode.

7. To transfer the audio of a file played by Mobile Phone to the Car Audio Player
If the mobile phone supports A2DP and could play audio files, when the Mobile Phone plays an audio file(For some Mobile Phones, you must first select Play by BT), the playback will be transferred to the Car Audio Player.
In A2DP mode, if the Blue tooth device of the Mobile Phone supports AVRCP, the functions of the >>|, |<< and PLAY/PAUSE buttons are the same as one in media mode(no fast forward/backward functions for the >>|/|<< buttons). The other buttons normally available in media mode are not available.

7. ST BUTTON
In FM mode, press the ST button briefly on remote control to select stereo or mono sound mode.

8. LOUD BUTTON
When press shortly, the LOUD mode is turned on, its to enhance the bass sound effect when the volume level is low. Press again to cancel the loudness effect.

9. LOC BUTTON
Radio station search mode is divided by this LO/DX switch, this button can be used to control an attenuator in the tuner during search. The detecting level of seek, scan, auto-memory will be reduced as much as the attenuated level of the tuner. In radio mode, press the LOC button to change local reception or distance reception. (Note: This button is only for FM reception. In AM mode, LOC is void.)

10. To remove front control panel
Press RELEASE button to release front control panel from unit chassis, then you can remove it from unit chassis.
When front control panel is removed, the LED indicator on front cabinet flashes.

11. To reset unit
Before operating the unit for the first time, or after replacing the car battery or changing the connections. You must reset the unit.
(To reset the unit, remove the front control panel, then press RESET button and hold for more than 8 seconds with a cuspidal object.)

RADIO OPERATION:

1. To select radio band
Press BAND or BND button briefly and repeatedly to select a desired radio band in sequence and circulation as follows:
-->FM1-->FM2-->FM3-->AM1(MW1)-->AM2(MW2)--> .

2. To search for radio station manually or automatically
Press >>| or |<< button briefly to manual tune up/down for your desired radio stations step by step.
Press and hold >>| or |<< button for 0.5 seconds, to automatically tune up/down for a radio station of strong signal.
You can also press SCN button on remote control to automatically tune up for a radio station of strong signal.

3. To store current station or turn on a preset one

1) Press one of the 6 number buttons and hold for more than 1 second to store the current station in the preset memory bank of the number button for the current band. In this way the unit can store 30 preset stations.

2) Press one of the 6 number buttons briefly to turn on the preset station stored in the preset memory bank of the number button for the current band. Press A.P button briefly on remote control to preview the 6 preset stations stored in the preset memory bank.

4. To scan for each preset station or auto search for the strongest stations

When pressing and holding BAND button/A.P button on remote control for more than 1 second, the radio searches from the current frequency and checks the signal strength level until the 6 strongest stations are found. And then the 6 strongest stations are preset to the corresponding preset memory numbered bank. The auto-storage operation is implemented in the each selected band. When the auto-storage operation is finished, the radio executes Preset scan.

USB/Card OPERATION:

1. To insert or pull out SD card or USB stick

When needing to playback SD or USB music, insert SD card or USB stick into SD slot or USB socket. Then the playing mode will be changed into SD or USB mode and display Card or USB on LCD (When SD card and USB stick are both inserted into their slot or socket, the playing mode will be changed into the mode of the latter one), and then play the first track of SD or USB.

2. Press the >>| button briefly to play next track.

Press the |<< button briefly to play the current track from the beginning of it if the playing time is more than 2 seconds. Press the |<< button briefly to play the previous track if the playing time is less than 2 seconds.

3. To play fast forward or backward

Press and hold >>| or |<< button to play fast forward or backward.

4. To play previous or next 10th track or to play previous or next file

Press 5DIR- or 6DIR+ button to play previous or next 10th track.
Long press 5DIR- or 6DIR+ button to play previous or next file.

5. How to use 1/>||/TOP button

During playback, press 1/>||/TOP button to pause playback. When in pause mode, press 1/>||/TOP button to play again.
Press and hold 1/>||TOP button to select the first track for playback.

6. To scan tracks

During playback, press INT button briefly to play the first 10 seconds of each track, press INT button again to cancel INT function and retain playing the track currently selected.

7. To repeat track(s)

During playback, press RPT button briefly to play the current track repeatedly, and the LCD will display RPT ONE.
Press RPT button twice to play the tracks in the Album repeatedly, and the LCD will display RPT ABM.
Press RPT button thrice to cancel RPT function, and the LCD will display RPT OFF.

8. To play tracks in random

During playback, press RDM button briefly to play all tracks in random. Press it again to cancel RDM function.

9. Tracks search

Press BND button, it will activate TRACK SEARCH mode . The LCD will display TRK 0/00/000(deside on the total number of tracks in the SD card or USB stick) and flash the 0 on the biggest digit position. Then rotate VOL knob to select a number on the flashing digit position from 0 ~ 9. Then press SEL button to confirm the number and flash the 0 on next smaller digit position. With the same means, select the number on the flashing digit position with VOL knob. After finishing selecting the numbers on all digits position, press 1/PLAY button to play the track of the selected serial number.

BlueTooth Handfree System:

1. Pairing

Turn on Bluetooth mode of mobile phone, then select the function for Finding Bluetooth Device and enter it. After finishing finding, it will show the name of Bluetooth Device if found, select it and enter it, then it will show an interface that asks you to input password. Input the password 0000 and enter it, then the LCD of the car audio system will display “BT READY” and “PHONE” .

2. Connection or disconnection

A) Use mobile phone to do connection or disconnection

1) In connection status, find the paired and connected Bluetooth Device, then press the disconnection button to do disconnection.

2) In disconnection status, find the paired and disconnected Bluetooth Device, then press the connection button to do connection.

B) When powering on (after Acc of the car was switched off), the unit will search for mobile phone, pair and connect. This will take about 10-15 seconds.

Note:

In connection status: Mobile phone transfers to car audio player whenever a dialling takes place; Mobile phone transfers to car audio player whenever receiving a call.

3. Dialling when in connection status

A) Dial with mobile phone directly.

B) Dial with remote control with the following procedures:

1) Briefly press TEL button , then CALL will appear on LCD.

2) Input telephone number with number buttons 0-9.

3) Briefly press CLEAR button to cancel the incorrectly entered number if necessary.